
TAURAGĖ - EYTR

1. Koordinatės ir padėtis

55 13 54N 022 09 01E
9 km atstumu į vakarus nuo Tauragės miesto centro

2. Adresas

Girininkų kaimas
Žygaičių seniūnija
Tauragės rajonas
Lietuva
Mob. +370 698 39 524
Faks. +370 446 51 896
El. p. kostasba@gmail.com

3. Eismo tipas (IFR/VFR)

Skrydžiai pagal VFR dienos metu

4. Darbo valandos

Pagal išankstinį užklausimą

5. Muitinė/Imigracija

Nėra

6. Degalai, tepalai ir priemonės nuo apledėjimo

Degalai: nėra
Tepalai: nėra
Priemonės nuo apledėjimo: nėra

7. Angarai atskrendantiems orlaiviams

Pagal susitarimą

8. Taisymo įranga atskrendantiems orlaiviams

Nėra

9. Gelbėjimo ir priešgaisrinė tarnyba

Pirminės gaisro gesinimo priemonės.
Įvykus avarijai aerodromo teritorijoje, gelbėjimo darbus atlieka aerodromo administracija, pasitelkusi aplink esančias paieškos ir gelbėjimo struktūras. Apie įvykį pranešti:

- a) priešgaisrinei tarnybai
Tel.112

1. Coordinates and location

55 13 54N 022 09 01E
9 km to west from Taurage

2. Address

Girininkai village
Zygaiciai Eldership
Taurage district
Lithuania
Mob. +370 698 39 524
Fax. +370 446 51 896
E-mail: kostasba@gmail.com

3. Types of traffic permitted (IFR/VFR)

VFR day operations

4. Operational hours

On prior request

5. Customs/Immigration

NIL

6. Fuel, Oil and De-icing Fluid, etc.

Fuel: NIL
Oil: NIL
De-icing fluid: NIL

7. Hangar Space for Visitors

On agreement

8. Repair Facilities Available

NIL

9. Rescue and Fire Fighting Service

Primary fire fighting facilities.
In emergency on the territory of aerodrome rescue and fire fighting service is provided by appropriate neighbouring authorities. An incident should be reported to:

- a) Fire fighting service
Tel.112

b) Aeronautikos gelbėjimo koordinaciniam centrui
Tel.: +370 706 94 587
+370 706 94 588
+370 706 94 585
Mob. +370 610 46 024

10. Sezoninis tinkamumas
Pagal išankstinį paklausimą

11. Viešbučiai
Mieste

12. Restoranas
Mieste

13. Turizmo biuras
Mieste

14. Medicinos įstaigos
Ligoninė mieste

15. Transportas
Taksi pagal užsakymą

16. Kilimo ir tūpimo takas
Kilimo ir tūpimo tako klasifikacija:

<u>KTT Nr.</u>	<u>RWY kodas</u>	<u>Danga</u>
08	1A	Asfaltbetonis
26	1A	Asfaltbetonis

17. Pastabos
Nėra

b) Aeronautical Rescue Coordination Centre
Tel.: +370 706 94 587
+370 706 94 588
+370 706 94 585
Mob. +370 610 46 024

10. Seasonal Availability
On prior request

11. Hotels
In the town

12. Restaurant
In the town

13. Tourist Office
In the town

14. Medical Facilities
Hospital in the city

15. Transport
Taxi on request

16. Runway
RWY classification:

<u>RWY Nr.</u>	<u>RWY code</u>	<u>Surface</u>
08	1A	Asphalt-Concrete
26	1A	Asphalt-Concrete

17. Remarks
NIL


AERODROME CHART

TAURAGE RADIO 122.225
FIS PALANGA INFO 125.730

TAURAGE
AD ELEV **125'**
55° 13' 54" N
022° 09' 01" E

Scale 1:5 000

DIMENSION IN METRES

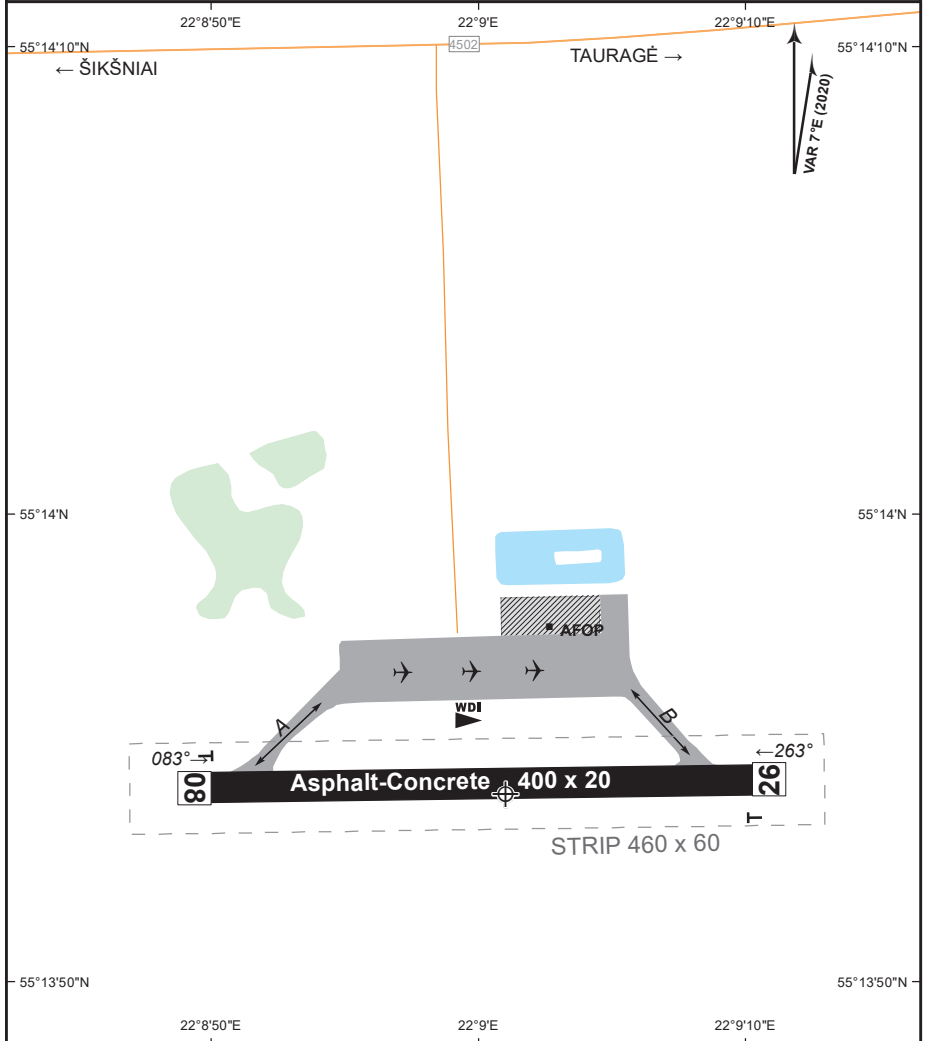

Changes: FIS FREQ to CH.

RWY	DIRECTION	RWY DIMENSIONS (M)	SURFACE	MTOM (KG)	THR	NOTES
08	090° TRUE	400 x 20	Asphalt-Concrete	5700	551354.15N	1. Apron: 150 x 30 m
	083° MAG				0220848.82E	
26	270° TRUE				551354.33N	
	263° MAG				0220911.45E	


VISUAL APPROACH CHART

TAURAGE RADIO 122.225
FIS PALANGA INFO 125.730

TAURAGE
AD ELEV 125'
55° 13' 54" N
022° 09' 01" E

Scale 1:100 000

ELEV, HGT IN FT; HGT above AD

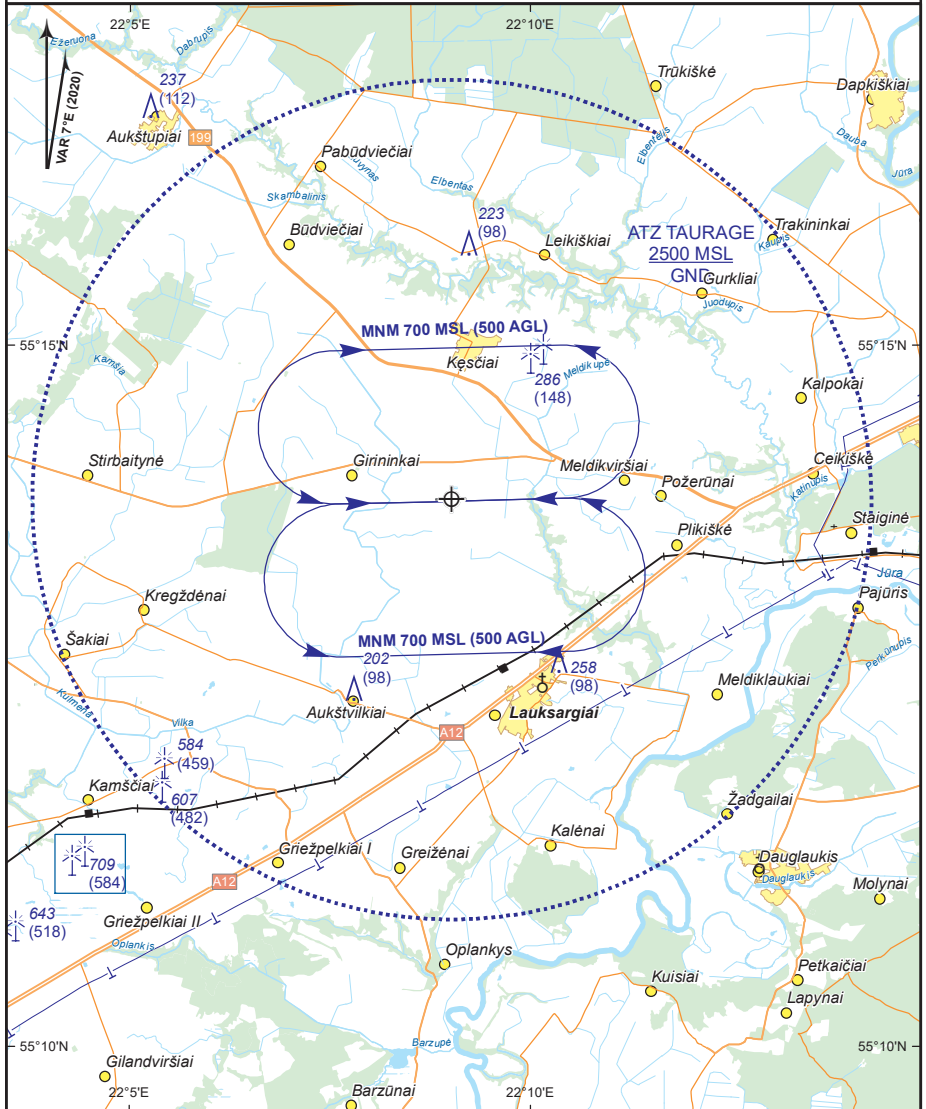

Changes: FIS FREQ to CH.

Notes:

1. ATZ (RMZ) a circle radius 3NM (5.6KM) centered on ARP.
2. RMZ - radio mandatory zone. Before entering RMZ, a pilot shall establish radio communication and transmit call sign, type of aircraft, position, level and intentions of the flight.